

5700-17 ABRASIVE REGULATOR - PILOT AIR TO OPEN

<u>PART NUMBER</u>	<u>KEY</u>	<u>DESCRIPTION</u>
5771	(1)	Control Handle
5772	(2)	Retaining Pin
5773	(3)	Control Stem
5774	(4)	Spring Tensioner
5777	(5)	Spring Retainer
5778	(6)	Valve Cover
5779	(7)	Hexhead Bolts (6) 3/8"-16 x 4", <i>each</i>
5706	(7)	Hex Nuts (6) 3/8-16, <i>each</i>
5780	(8)	Valve Spring
5781	(9)	Spring Bolt with Nut
5782	(10)	Spring Washer
5712	(11)	Diaphragm (2), <i>each</i>
5718	(12)	1" Clean Out Plug
5784	(13)	Threaded Washer
5785	(14)	Center Spacer
5786	(15)	Spacer Piston
5787	(16)	Piston Guide
5788	(17)	Guide O-Ring
5789	(18)	Piston O-Ring
5710	(19)	Ball and Stem Nut
5791	(20)	Ball and Stem
5715	(21)	Valve Seat
5717	(22)	Valve Body

5790 Spring Assembly includes (4,5,8,9,10,11,13)

